

Philips
CD Soundmachine with
Dynamic Bass Boost

MP3

USB

AZ382



Play back your digital music via USB Direct

Want to enjoy the music collections stored at the portable music player without using headphones? Plug the portable player to the AZ382's USB Direct socket and enjoy your favourite digital music through the powerful speakers.

The ultimate listening experience

- Enjoy MP3/WMA music directly from your portable USB devices
- Play MP3/WMA-CD, CD and CD-RW
- FM/MW stereo tuner

Easy to use

- 20-track CD programmable
- CD shuffle/programme/repeat
- Line-in connection

Rich and clear sound experience

- Dynamic Bass Boost for deep and dramatic sound

PHILIPS
sense and simplicity

Specifications

Audio Playback

- Loader Type: Top
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc Playback Modes: Fast Forward/Reverse, Repeat Play, Next/Previous Album Search, Next/Previous Track Search, Shuffle Play
- Programmable Tracks: 20

Tuner/Reception/Transmission

- Tuner Bands: FM, MW
- Antenna: FM Antenna

Sound

- Output power (RMS): 2 x 1 W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Speaker diameter: 3"
- Volume Control: rotary

Connectivity

- 3.5 mm stereo line in
- USB: USB host

Power

- Mains power
- Battery type: LR14
- Battery voltage: 1.5 V
- Number of batteries: 6

Accessories

- Included accessories: AC Power Cord, User Manual, Warranty certificate

Dimensions

- Packaging dimensions (W x H x D): 284 x 264 x 155 mm
- Product dimensions (W x H x D): 262 x 123 x 245 mm
- Weight: 1.5 kg
- Weight incl. Packaging: 1.84 kg

Convenience

- Display Digits: 3
- Display Type: LCD



Highlights

USB Direct for MP3/WMA music



Simply plug in your device to the USB port on your Philips Hi-Fi system. Your digital music will be played directly from the device. Now you can share your favourite moments with family and friends.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorised music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Line-in connection

Line-in connection



Issue date 2009-12-21

Version: 1.0.5

12 NC: 8670 000 37476
EAN: 87 12581 41004 9

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com